


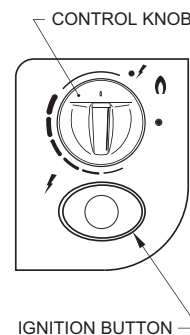
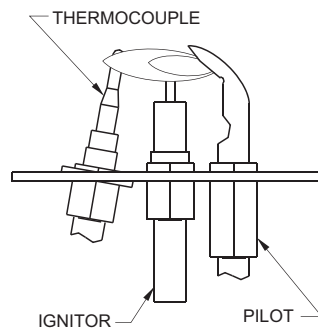


LIGHTING INSTRUCTIONS

1. STOP! Read the safety information on the side of the heater.
2. Check that gas supply to heater is on.
3. Push in gas control knob slightly and turn clockwise  to “OFF” position. Do not force (see below).
4. Wait five (5) minutes to clear out any gas, then smell for gas, including near the floor. If you smell gas, STOP! Follow “B” in the safety information on the side of the heater. If you do not smell gas, go to the next step.
5. Turn control knob counterclockwise  to pilot (*) position. Push control knob all the way in and hold it. Repeatedly push the piezo ignitor button until the pilot is lit. Keep control knob pressed for fifteen (15) seconds before releasing. If pilot does not light, repeat. If spark is not working, light the pilot with a match. The pilot can be located by looking through the rectangular opening on the front cover. **NOTE:** It may be necessary to depress for thirty (30) seconds if this is the first time the heater is connected to the gas supply. There may be air in the pilot line.
6. If the pilot light does not stay lit after several tries, turn gas control knob to “OFF” and call your service technician or gas supplier.
7. If knob does not pop up when released, STOP and call your service technician or gas supplier immediately.
8. To select the desired heating level, press down the control knob slightly and rotate counterclockwise . Release downward pressure on the knob while continuing to turn until the knob locks at the desired setting position. Do not operate between locked position.




TO TURN OFF GAS TO APPLIANCE

Turn control knob clockwise  to the “OFF” position.

CAUTION:

Wait five (5) minutes before relighting the heater.

TO TURN OFF BURNER ONLY:

Turn knob clockwise  to the “PILOT” position. Pilot will remain lit.